


# CERAMIC DOME FILTER


Replace standard dome in top bowl with ceramic dome filter

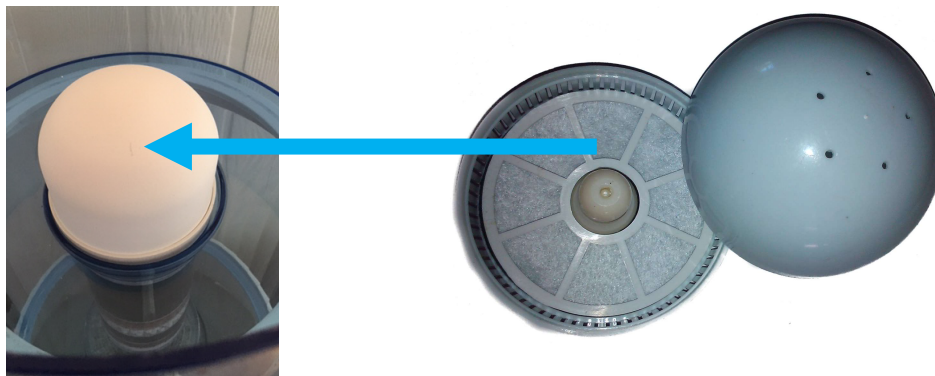

**ENSURE HOT WATER REMAINS OFF UNTIL YOU HAVE A STEADY FLOW OF WATER FROM THE HOT TAP. YOU WILL RUN THE RISK OF BURNING OUT THE KETTLE IF YOU LEAVE IT ON WITHOUT ENOUGH WATER IN IT.**

Please note that **water flow** is much slower when using the Ceramic Dome filter. When first installing it can take up to 48 hours for the water in top bowl to filter through. The flow does increase once the filter has soaked in. You can expect around **1 litre per hour** to go through the filter. For first time use, discard first few litres that has gone through

filter. This filter does become very dirty as it collects all the solid particles in the water on the outside of the ceramic dome. Unscrew the carbon filter from top bowl, then undo the nut at the bottom of the bowl to remove the ceramic dome. Under running water, scrub lightly with a toothbrush to remove dirt build-up. Do not use any soap or detergents

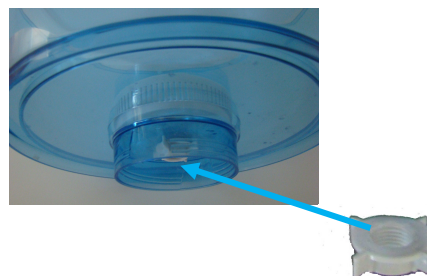

UNSCREW FILTER ANTI-CLICK WISE FROM BOTTOM BOWL. UNDO NUT AT THE UNDER THE BOTTOM BOWL TO REMOVE STANDARD DOME. REPLACE WITH CERAMIC DOME

## FILTER CHANGE – RECOMMENDED EVERY 6 MONTHS

- Ceramic dome = \$30 Carbon filter \$45 Combo Price \$ 70
- Service & installation fee \$ 20

Contact us or visit our website to order filter replacements or book a service & filter change  
[www.awesomewatermackay.com](http://www.awesomewatermackay.com)

FOR SALES, RENTALS, FILTERS, SERVICE & REPAIRS

**PH: 0401 441 291**   
[www.awesomewatermackay.com](http://www.awesomewatermackay.com)  
[info@awesomewatermackay.com](mailto:info@awesomewatermackay.com)

